

Norwii Function Compatibility List

Applicable models: N10s Pro, N95s Pro, N96s, N97s, N86s, N99s

The test results show the compatibility of the default button functions of the product with popular operating systems and commonly used software.

If the result shows that it is not supported, the customer can modify the button function to be supported through customization.

Digital Pointer Series	Operation System→		Windows 7 and above				macOS			Android 4.4 and above		iOS(Test by iPad)			Linux(Ubuntu 18.04)
	Function of the Presenter	Corresponding keyboard function	MS Office[4]	WPS	Open office	Prezi	Keynote	MS Office 365	Prezi	WPS	MS office	Keynote	WPS	MS Office	LibreOffice 6
Digital laser products -Test environment: Norwii Presenter App not start	Digital Pointer	/	X	X	X	X	X	X	X	X	X	X	X	X	X
	Page Up	Page Up	√	√	√	√	√	√	√	√	√	X	X	X	√
	Page Down	Page Down	√	√	√	√	√	√	√	√	√	X	X	X	√
	Arrow Up	Arrow Up	√	√	√	√ [3]	√	√	√ [3]	√	√	√	√	√	√
	Arrow Down	Arrow Down	√	√	√	√ [3]	√	√	√ [3]	√	√	√	√	√	√
	Arrow Left	Arrow Left	√	√	√	√	√	√	√	√	√	√	√	√	√
	Arrow Right	Arrow Right	√	√	√	√	√	√	√	√	√	√	√	√	√
	Full Screen[7]	Shift+F5等 [1]	√	√	√	X [4]	√	√	X [4]	X	X	√	X	X	√
	Escape Full Screen	ESC	√	√	√	√	√	√	√	√	√	√	√	√	√
	Black Screen	b	√	√	√	√	√	√	√	X	√	√	√	√	√
	Mouse Move	Mouse Move	√	√	√	√	√	√	√	√	√	X	X	X	√
	Mouse LeftClick	Mouse LeftClick	√	√	√	√	√	√	√	X	X	X	X	X	√
	Mouse RightClick	Mouse RightClick	√	√	√	√	√	√	√	√	√	X	X	X	√
	Mark	Ctrl + P	√	√	X	X	X	X [1]	X	X	√	X	X	X	X
	Eraser	e	√	√	X	X	X	√	X	X	√	X	X	X	X
	Volume up/down	Volume up/down	√	√	√	√	√	√	√	√	√	√	√	√	√
	Virtual Laser in MS PowerPoint	Ctrl+L	√	X	X	X	X	X	X	X	X	X	X	X	X
Digital laser products -Test environment: Started Norwii Presenter App	Digital Pointer	/	X	X	X	X	X	X	X	X	X	X	X	X	X
	Page Up	Page Up	√	√	√	√	√	√	√	√	√	X	X	X	√
	Page Down	Page Down	√	√	√	√	√	√	√	√	√	X	X	X	√
	Arrow Up	Arrow Up	√	√	√	√ [3]	√	√	√ [3]	√	√	√	√	√	√
	Arrow Down	Arrow Down	√	√	√	√ [3]	√	√	√ [3]	√	√	√	√	√	√
	Arrow Left	Arrow Left	√	√	√	√	√	√	√	√	√	√	√	√	√
	Arrow Right	Arrow Right	√	√	√	√	√	√	√	√	√	√	√	√	√
	Full Screen[7]	Shift+F5等 [1]	√	√	√	X [4]	√	√	X [4]	X	X	√	X	X	√
	Escape Full Screen	ESC	√	√	√	√	√	√	√	√	√	√	√	√	√
	Black Screen	/	√	√	√	√	√	√	√	Not Support.					
	Highlight	/	√	√	√	√	√	√	√						
	Magnifier	/	√	√	√	√	√	√	√						
	Digital Laser	/	√	√	√	√	√	√	√						
	Mark	/	√	√	√	√	√	√	√						
	Eraser	/	√	√	√	√	√	√	√						
	Vol up/down	Vol up/down	√	√	√	√	√	√	√						

Annotation:

[1]: The default shortcut keys to start full-screen slide show are a series of shortcut keys, not just Shift + F5 for PowerPoint for Windows. The reason why a series of shortcut keys are sent is to be compatible with multiple presentation software at the same time. In macOS, the shortcut key for PowerPoint to start slide show from the current slide is Command + Return.

[2]: In macOS system, due to shortcut keys conflict, Norwii presenter does not support one-click to start Pen.

[3]: To forward and backward pages in Prezi, you need to switch to Page Up and Page Down modes or Arrow Left and Arrow Right modes by press the page up key and page down key at the same time. The Arrow Up and Arrow Down mode corresponds to the smart zoom-in and smart zoom-out functions in Prezi.

[4]: There is no shortcut key for Prezi to start slide show. The only way to start slide show in Prezi is to click slide show button with the mouse.

[5]: We have tested Microsoft PowerPoint from Microsoft Office 2003.

[6]: "Laser Pointer" is to use the "Laser Pointer" of Microsoft PowerPoint. Only Microsoft Office 2010 or later support the "Laser Pointer" function. After start slide show, right click, select Pointer Options – Laser Pointer from right-click popup menu. The shortcut key is Ctrl + P.

[7]: Includes N28's one-click to start slide show and other wireless presenter's long press page up key to start slide show.