

**Wireless Presenter
User's Manual**

Be sure to carefully read this user's manual before using the wireless presenter and keep it for future reference.

WARNING

There is a lithium battery in this product. Do not throw it into the fire, because the battery may explode; Also, do not immerse it in water or any other liquid, battery short circuit may also explode.

DECLARATION

The product specifications and information mentioned in this manual are for reference only and are subject to change without prior notice.

Information in this document is subject to change without notice. No part of this document may be reproduced or transmitted in any form or by any means, electronic or mechanical, for any purpose, without prior permission of the seller.

Thank you for choosing the omnidirectional wireless presenter which is carefully designed for you. This product adopts humanized design concept and many new patented technologies. Whether you are a professional lecturer or a business person, this product will bring you unprecedented use experience.

Features

1. 2.4GHz international frequency, 50m control distance, 360 degrees control without directional restriction. With automatic frequency hopping technology, it can effectively avoid interference from other radio frequency signals.
2. There are 'L' & 'R' key on presenter which equal left and right key on mouse.
3. digital laser key, can display digital laser, zoom in, magnifier (which can work with Norwii Presenter software) on screen.
4. Support page up, down function,

hold page up or page down to work function customization, for example, Fast Backward, Fast Forward, scroll, black screen ect. (which can work with Norwii Presenter software)

5. 300mAh lithium battery, Type-C USB port. You can charge it by computer USB port and mobile phone charger to avoid the trouble of changing batteries.

6. Norwii UniCoding 1 optimal control technology to ensure 1-to-1 precise control.

7. Right side key includes volume control function, support computer system volume up, volume down.

8. Vibration reminder set: remind presenter of controlling time by alarm vibration.

9. Automatic standby, deep sleep, power switch, Multiple saving electronic design which cause more energy conservation, durable; unique power switch design can avoid leakage of electricity cause by key being squeezed in the bag.

10. Portable with integrated design, wireless receiver can be easily stored inner of wireless presenter.

11. This product only supports standard 5V charging. It does not support all kinds of QC fast charging. When using a voltage higher than 5V for charging, it will burn out the product or cannot be charged.

Who should have this device

All the people who present with PowerPoint, such as teachers, trainers, businessmen, will need this device.

III. Operation system

Support Windows 7/8/10/11 and macOS 10.15 or later, only support laser and page up/down on Android & Linux.

Package contents

1. Wireless presenter (USB receiver included) *1
2. User Manual *1
3. Type-C USB Cable *1

Specifications


Transmitter


Technology:	Radio Frequency
Frequency:	2.4GHz
Control Distance:	Up to 50m
Battery:	300mAh Lithium Battery
Charging Voltage	5V
Working Voltage:	3.7V
Weight:	31.6g
Dimension:	111.8*32*10.6mm

USB Receiver

Operation System:	Windows 7/8 macOS, Linux, Android
USB Version:	USB 2.0
Working Voltage:	5V DC
Weight:	2.17g
Dimension:	22.7*14*7.6mm

Function map

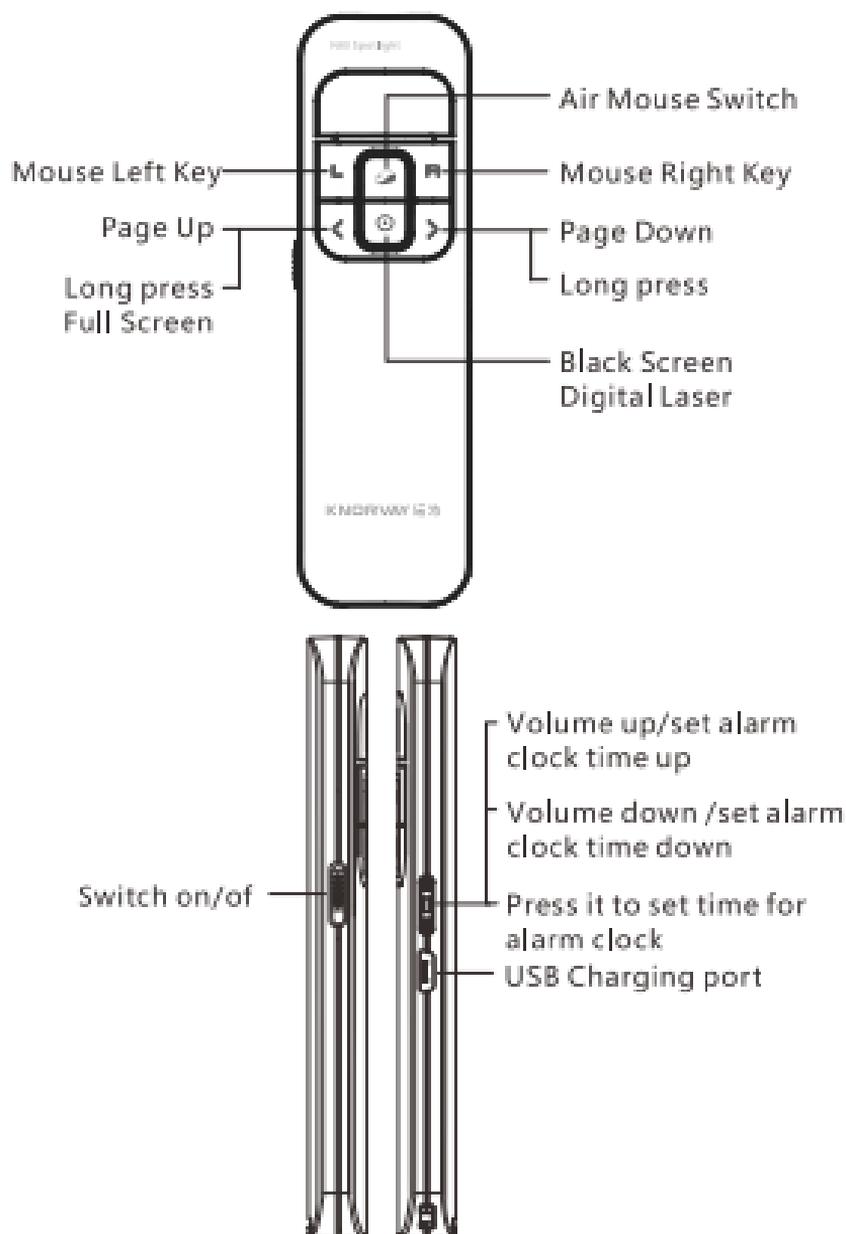

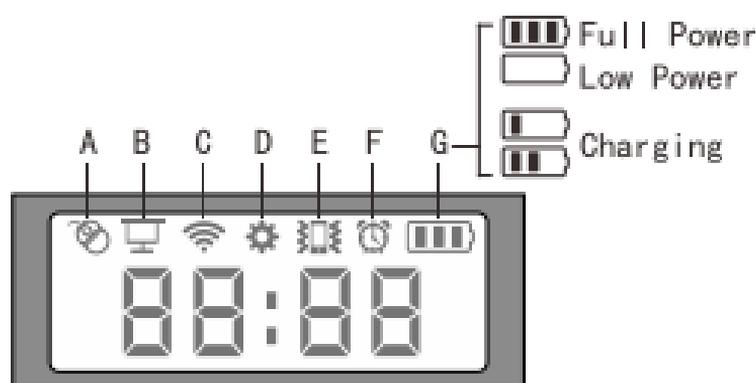

LCD

- A: Mouse Mode
- B: Page Up/Down Mode
- C: Signal Icon
- D: Standard Time
- E: Vibration Alarm
- F: Alarm Time
- G: Power Icon

Attention: When using this product, please change your Input Method Editors (IME) to English input mode.

Function Description

1. Power switch key, turn it off once off use; turn it on once on use. This function can avoid electronic leakage once key in the bag being squeezed. It can effectively extend the battery life.
2. Volume control: Let volume control function work by setting up key sliding up and down. Short press it toward inner, then slide it up

and down to adjust alarm time.
Volume control: set up key slide up and down to work volume control function. Press it toward inner, then turn it up and down to adjust alarm time.

3. Mouse left key : it is same with computer's mouse left key.

4. Mouse right key : it is same with computer's mouse right key.

5. Mouse switch : click it to start mouse pointer moving function. Click it again to close this function. In state of mouse function work, long press for 2 seconds to let mouse right key work.

6. Digital laser key : can display digital laser, spotlight, magnifier (which can work with Norwii Presenter software) on screen.

1) Digital laser, press and hold digital laser, it occurs to red circle. At the same time, press  or  to enlarge or narrow the circle until it become red dot.

2) Spotlight: double click digital

laser key to switch to this mode, occurs to defaulted white spotlight circle; out of spotlight circle displays dark grey, while inner of spotlight circle displays light white. Zoom in content in the circle. At the same time, press  or  can enlarge or narrow circle.

3) Magnifier: double click digital laser key to switch to this mode; defaulted magnifier occurs. At the same time, press  or  can enlarge or narrow circle.

7. Digital laser key : When the Norwii Presenter software is not running, Pointer key has two modes, the presentation mode and mouse mode. The default mode is the presentation mode, which can be switched by double-clicking the Pointer key.

1) In presentation mode, click has no function to prevent forwarding slide when clicked. When long pressing, you can use the built-in digital laser function of PowerPoint

in the full-screen state of PowerPoint.

2) In mouse mode, a click is a mouse left click, and you can click a hyperlink.

8. Page up key : click to page up; long press to full screen in PowerPoint; long press again to exit full screen.

9. Page down key : click to page down; long press to black screen in PowerPoint; long press again to exit black screen.

Notice:

1. LCD time display, the forward 2 numbers are hour, the back 2 number are minute.

2. Short press set up key toward inner to set up alarm clock, alarm clock icon occurs in screen. Increase or decrease alarm clock time by sliding up and down. Numbers will increase or decrease by 5 as interval to decrease slide frequency in sliding up and down status.

3. Vibration reminder will vibrate once every 10 min, 5 min, 0 min before alarm clock setting time.


4. It shortly vibrates 4 times when vibration reminder works. At the same time, alarm clock time in the screen flash mob.

Installation


1. Take out the USB receiver and install.

Take out the USB receiver from the presenter and plug it into the computer's USB port. At this time, "Discover New Hardware" will be displayed in the lower right corner of the computer, and the driver will be installed automatically. When Windows displays "New hardware is installed and ready to use", it means that the USB receiver is installed.

(Take out the USB receiver from the presenter)

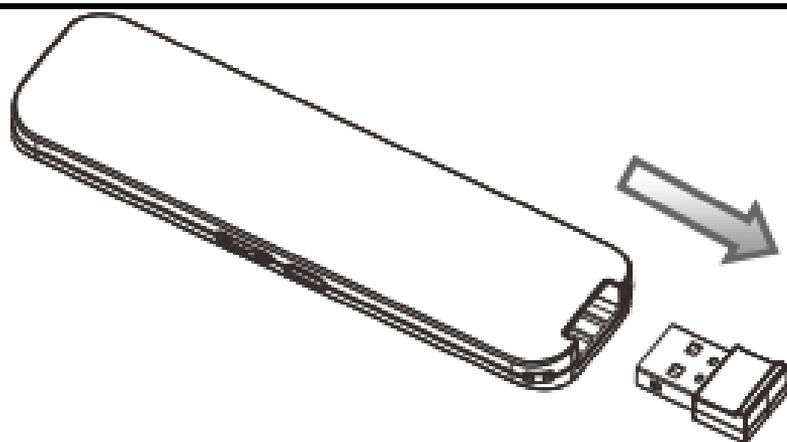


(Plug the USB receiver into the computer's USB port.)

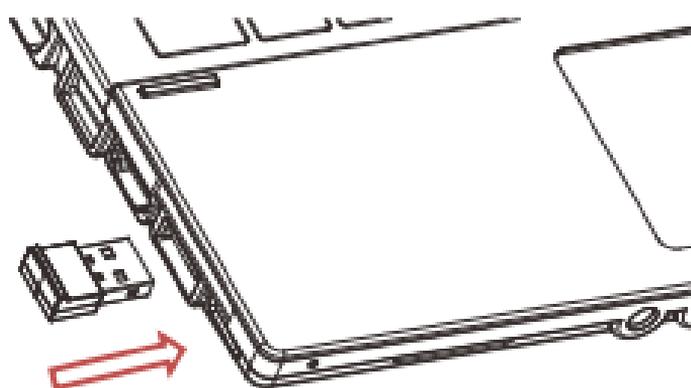

2. Control the computer by operating the presenter.

3. Turn off the presenter.

Plug the USB receiver into the presenter and turn off the power switch when you stop using it.

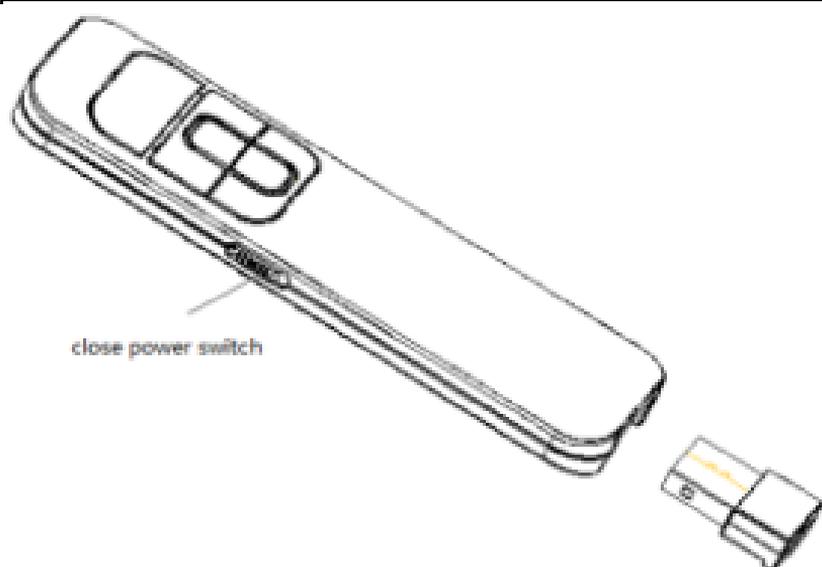

Charging the wireless presenter

1. Low power indication


When the power is low, the battery indicator  on the LCD will flash slowly to remind the user to recharge the wireless presenter.

2. Charging the wireless presenter.

Connect the Micro port of wireless presenter to a USB port of computer via USB cable. When the battery icon  on screen flashing display and is always on, it indicates that it's charging. If the battery icon  stop flashing, it means the charging is completed. If you have a USB Micro phone charger, you can also use it to charge the

presenter.

3. Charging time varies depending on the power supply of the USB port. Normally the charging time is about 2 hours.

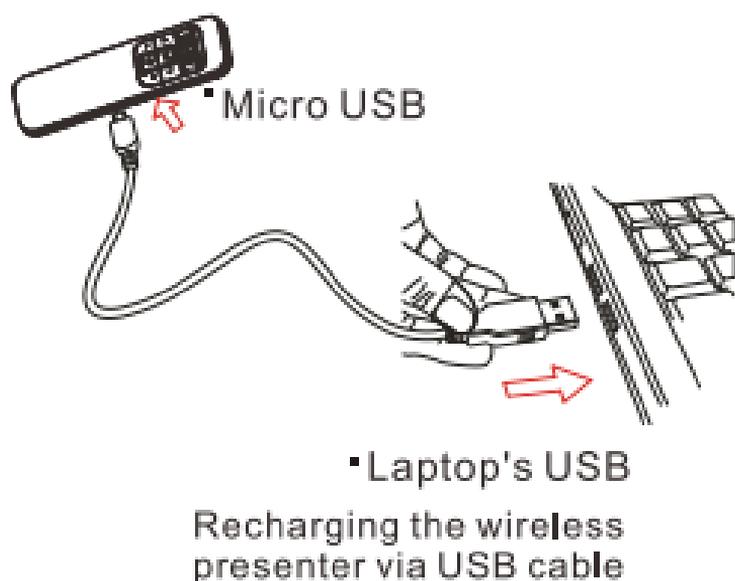

Frequently Asked Questions

1. How to download Norwii Presenter software and how to pair the presenter and the USB receiver?

Please go to the "Driver Downloads" page under the "Services and Support" section of the official website www.norwii.com to download the Norwii Presenter software and use the software to

pair.

2. How to know the battery is out of power?

When you turn on the power, no display on screen. It means battery is out of power.

When battery is no power, please recharge it as soon as possible because it will shorten life of battery in status of over discharging.

When battery is with low power, the battery icon  on LCD flash slowly. It means the power is low and the battery needs to be recharged.

3. How to know the battery is full when charging?

If the battery indicator  stops flashing when the battery is being charged, it means the recharge is completed.

4. After receiver plug in USB port of computer, how to deal with it if no respond on computer or no identify?

Please confirm if USB port on

computer can work normally, and try it via other USB port. Please try it via other computer if it is necessary. Plugging other USB device to the USB port to check if it can work normally. If other USB device can work normally via this USB port. It means the receiver occurs to fault. Please contact distributor to maintain it.

5. If the receiver can work via other USB port. It means USB port occurs fault. If the USB port can work normally, while the receiver can work normally via USB port in other computer. It means there is something wrong with the driver of computer. When there is something wrong with computer, please back up data. Reinstall operation system. If laser can work normally, the receiver can be identified by computer, when the transmitter can work normally, computer is out of control, how to deal with it.

Generally it caused by no address code conservation without receiving signals from transmitter and need pair operation. The system function is disordered. What should I do if I press the corresponding button to perform other functions?

It may be that some shortcuts of the operating system or application (such as PowerPoint) are changed to other shortcut keys. Please check the system or application shortcut settings, or reinstall the operating system and applications after backing up the data.

6. How to adjust the settings for Norwii Presenter on macOS?

On Apple's macOS, the Norwii Presenter software requires three permissions: Accessibility, input monitoring, Screen & System Audio Recording. If it has not been set before, please click "Grant Permissions" in the "About" tab of the Norwii Presenter software, and

then open the corresponding permission settings in the window that opens. You can also check the box in front of the Norwii Presenter software in the above three permission settings in the "Launchpad - System settings – Privacy & Security – Accessibility, input monitoring, Screen & System Audio Recording" of macOS.

Certifications

CE, ROHS, FDA

FCCID: 2AXGRN95

Declaration of conformity

This laser product complies with IEC/EN60825-1:2014. Complies with 21 CFR 1040.10 and 1040.11, except for deviations pursuant to Laser Notice No.50, dated June 24, 2007.

Product Support

Shanghai Norwii Technology Co., Ltd.

Add: 2F, Building 3, No 277, Jinfeng Road, Pudong New Area, Shanghai 201201, P. R. China

Tel: 86-21-51872080

Email: support@norwii.com