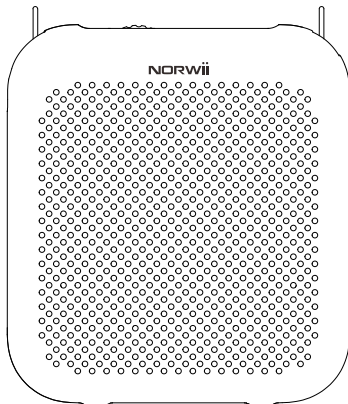
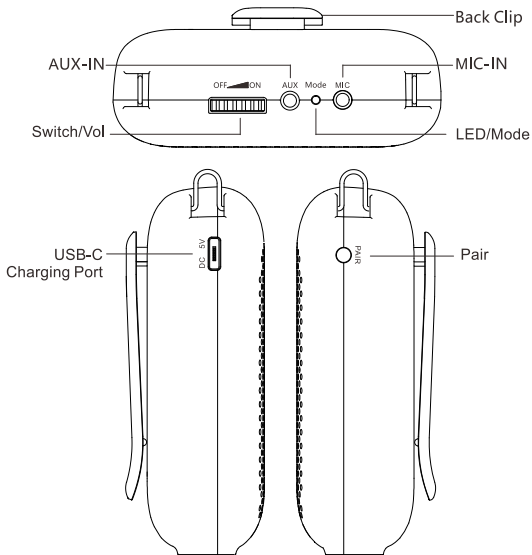

S358 Wireless Voice Amplifier User Manual

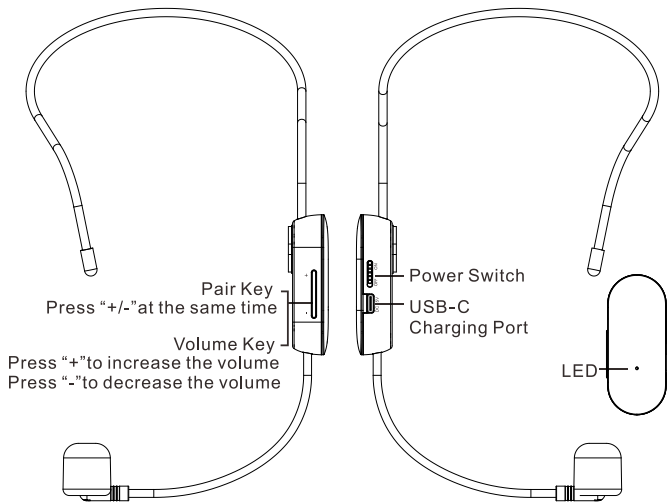


I. Function map





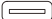 

S358 Wireless Voice Amplifier



S128 wireless microphone



II. Keys and Ports instruction

 Mode	LED/Mode	Press the key to switch between Bluetooth mode and Standby mode.
 MIC	MIC-IN	In Standby mode, insert microphone to 3.5mm microphone interface to amplify.
 AUX	AUX-IN	3.5mm audio interface, support music play, insert audio cable to play music automatically.
 PAIR	Pair key	Long-press the Pair key to connect the wireless microphone. Wireless amplification will be enabled after successful pairing. For the wired version, this key is inactive and has no silk-screen printing.
 DC 5V	USB-C Charging Port	Charging through 5V mobile phone charger and computer USB port.
 off on	Switch/Vol	Rotating the dial to switch on/off the amplifier and adjust the volume.

III. Operation description

1. Turning on and off power:

1) **Voice amplifier:** Turn the dial switch clockwise to the right. After hearing a “click,” the device powers on, the indicator light turns on, and it enters the last used mode by default. The voice prompt will say “Standby mode” or “Bluetooth waiting for connection.”

To turn the device off, turn the dial counterclockwise to the left while the device is on. After hearing a “click,” the device powers off and the indicator light turns off.

2) **Wireless microphone:** Slide the wireless microphone switch to the "ON" position to power on the device, the indicator light will illuminate. Slide the switch to the "OFF" position to power off the device, the indicator light will turn off.

2. LED/Mode

Press the key to switch between Bluetooth mode and Standby mode. A voice prompt will indicate the current mode.

While in Bluetooth mode, press and hold the key to disconnect the current Bluetooth connection. The device will return to an unconnected state and give the voice prompt "Bluetooth waiting for connection," allowing you to reconnect to Bluetooth.

For example, if the device powers on in Bluetooth mode by default:

1) The voice prompt says "Bluetooth waiting for connection." To connect, turn on Bluetooth on your phone, find the device name "S358" in the list of available devices, and tap to connect. A voice prompt will say "Connected." You can now play music or other audio from your phone. If you turn off Bluetooth on your phone, the voice prompt will say "Disconnected." When you turn Bluetooth back on, the device will automatically reconnect.

2) Press the key to switch to Standby mode. The device will give a voice prompt. In this mode, the Bluetooth connection is disconnected and cannot be connected.

3) Press the key again to switch back to Bluetooth mode. The voice prompt will say "Bluetooth waiting for connection." Press and hold to disconnect the currently connected phone, allowing another phone to connect via Bluetooth. Press and hold again to automatically reconnect to the last paired phone. If Bluetooth is disabled on your phone but other phones can connect via Bluetooth, repeat step 1 to perform Bluetooth pairing.

4) The voice amplifier only retains the identification information of the last paired device. Each time the voice amplifier powers on and enters Bluetooth mode, it will automatically connect to the last connected device

3. Wired microphone voice amplification



Plug the wired microphone directly into the MIC interface to amplify sound. When using, put on the wired microphone first, then adjust the position and angle of the microphone pickup head.

The product features anti-feedback (anti-whistling) technology. If feedback occurs due to close use or sound wave reflection in a small space, you can reduce or eliminate it by moving the microphone away from the speaker or repositioning it downward. The speaker will stop whistling immediately.

4. Wireless Voice Amplifier and Wireless Microphone Pairing Operation

The product comes pre-paired from the factory and requires no additional pairing. It is ready for immediate wireless amplification use. Each wireless microphone can only store the pairing information for one wireless voice amplifier (the last one it was paired with). The wireless voice amplifier and wireless microphone will automatically reconnect every time they are powered on.

To pair a new wireless microphone, using the wireless voice amplifier S358 and wireless microphone S128 as an example, follow these steps:

1) Turn on the wireless voice amplifier. Press and hold the Pairing Key “” on its side for 1-2 seconds. The indicator light on the amplifier will illuminate yellow, and a voice prompt will announce, “Waiting for pairing,” indicating it has entered pairing mode. The amplifier stays in pairing mode for 30 seconds. It will exit this mode and announce “Pairing failed” if no connection is made within that time. You can also exit pairing mode immediately by briefly pressing the Pairing Key “” again while the yellow light is on. The light will turn green, and the unit will announce “Pairing failed.”

-
- 2) Within 30 seconds of the amplifier entering pairing mode, turn on the S128 wireless microphone. While powering it on, press and hold both the Volume “+” and Volume “-” keys on its side. After about 1 second, the microphone’s indicator light will stay steadily lit. At the same time, the amplifier’s indicator light will change from yellow to green, and a “Pairing successful” voice prompt will play. This indicates successful pairing between the S358 amplifier and the S128 microphone.
 - 3) If pairing fails, repeat steps 1) and 2) to try again.

5. Volume control

- 1) **Voice amplifier:** Rotate the dial to adjust the volume. Turn it clockwise to the right to increase the volume, and counterclockwise to the left to decrease the volume.
- 2) **Wireless microphone:** Press the "+" key to increase the voice amplification volume and press the "-" key to decrease the voice amplification volume.

6. AUX audio playback

Connect the voice amplifier to a computer, mobile phone, tablet, MP3, MP4, or other device using the 3.5mm AUX audio cable to play audio. In this mode, the device can be used as an external speaker.

IV. Charging instructions

1. When the battery is low, you can charge the voice amplifier using the included USB-C charging cable. Connect it to a computer, 5V phone charger, portable power bank, or similar device.
2. The product only supports standard 5V charging and does not support any type of QC fast charging. Using a charger with a voltage higher than 5V may damage the product or prevent it from charging.

3. LED indicator light description for the S358 wireless voice amplifier:

Voice amplifier status		LED indicator status
Low battery		LED indicator light flashing fast
Turn on the power to charge	charging	Yellow light always on
	Charged	Green light always on
Turn off power to charge	charging	Red light always on
	Charged	Green light always on

4. LED indicator light description for the S128 wireless microphone:

Wireless microphone status		LED indicator status
Low battery		LED indicator light flashing fast
Turn on the power to charge	charging	Purple light always on
	Charged	Green light always on
Turn off power to charge	charging	Red light always on
	Charged	Green light always on

V. Product specification

1. S358 wireless voice amplifier with 5200mAh lithium battery.

Rated power	7 W	Max power	15 W
Loudspeaker	3-inch 3-ohm magnetic speaker	Frequency response	120 Hz-15 KHz
Battery	3.7 V/5200 mAh, 2 lithium batteries in parallel	Charging voltage	USB/DC 5 V 2 A
Charging time	3-4 hours	Using time	10-12 hours
Size	91.1 x 101.5 x 37.8mm	Net weight	205.5 g

2. Specifications for S128 wireless microphone.

Battery	3.7 V/600 mAh	Charging voltage	USB/DC 5 V 0.5 A
Charging time	2 hours	Using time	35 hours
Frequency	2.4 G	Wireless distance	30 meters

VI. Packing List

Voice amplifier x 1, wireless microphone x 1, wired microphone x 1, USB-C cable x 1, 3.5 mm audio cable x 1, adjustable waistband x 1, user manual x 1.

VII. Tips and cautions

1. It is recommended not to remove the sponge cover by placing the wired microphone pickup head directly at the mouth 0.5-1 cm, which can attenuate airflow, reduce the noise generated by exhalation, and make the amplification clearer and more stable.
2. The microphone should not be directly facing the front of the voice amplifier at close range, and it is best to face the back of the microphone. The voice amplifier itself has a function to prevent voice whistling. If the voice amplifier produces a voice whistling sound, the microphone should be pulled or moved, and the voice amplifier will immediately stop whistling.
3. When using it for the first time or when not using it for a long time, fully charge the voice amplifier to ensure battery life.
4. Do not plug an external audio source signal into the microphone port to avoid distortion or damage to the voice amplifier due to excessive output.
5. Non-professional technicians please do not disassemble, modify or repair the machine without

authorization, if you have any questions, please contact our after-sales personnel.

6. Do not contact the product and accessories with water or moisture, and do not be exposed to rain and splashing water to prevent the product from entering the water and short circuit.
7. Do not use in flammable and explosive areas or areas where radio equipment is prohibited. When entering dangerous areas and areas prohibited by relevant regulations, the power supply of the product should be turned off to avoid potential safety hazards.
8. Do not use it in high temperature, high pressure, and high humidity environment (such as sunshine exposure, stove, heater, humidifier, water pool, etc.). Do not place it or close to dangerous sources (fire source, liquid, explosive, high-speed machinery, etc.) to avoid damage and danger.
9. To protect the environment, please put the discarded voice amplifier in the designated trash can or send it back to the manufacturer, and do not throw it away at will.

Shanghai Norwii Technology Co., Ltd

Address: No.277 Jinfeng Road, Pudong New Area, Shanghai, 201201, China

Tel: 86-21-51872080

Email: support@norwii.com