

Wireless Presenter User Manual

N86



Be sure to read this user manual carefully before using the wireless presenter and keep it for future reference.

WARNING

This product can generate laser beam. DO NOT STARE INTO BEAM OR EXPOSE USERS OF TELESCOPIC OPTICS. Do not shine the laser beam on people's or animal's eyes to avoid eye damage! Do not give this product to children as a toy!

Warning label for red laser product:



Warning label for green laser product:



This product contains AAA batteries. Do not throw this product into the fire as the battery may explode; Also, do not immerse this product in water or any other liquid, as it may explode if the battery is short circuited or damaged.

I. Features

1. Support previous page, next page. Click the page up key to go backward to previous page, long press to play slides from the current page. Click the down page key to go forward to the next page, long press to go into the black screen.
2. PowerPoint 2016, PowerPoint 2013, and PowerPoint 2016 for Mac can achieve digital laser function. In the full screen presentation state of PowerPoint files, press the laser pointer key to open the digital laser pointer inside PowerPoint.
3. Support full screen mark function, one key to mark and one key to erase the mark.
4. Support volume function, it can adjust the volume of the computer.
5. Support aerial mouse, with more flexible and precise cursor control.
6. Integrated design, the USB receiver can be easily stored in the tail of the wireless presenter, making it easy to carry.

7. Class 2 safe laser module that complies with IEC/EN60825-1:2014.
8. Supports USB 2.0 version, use operation system universal USB driver, plug and play.
9. The page up/down keys can be customized by Norwii Presenter software. The firmware of the USB receiver is updatable.

II. Operation system

Windows 7 / 8 / 10 / 11 or later, macOS/ Linux/ Android system. It may only support page turning function on Android/ Linux system.

III. Package contents

1. Wireless presenter *1 (USB receiver stored inside the wireless presenter)
2. User Manual*1
3. Two pieces AAA battery

IV. Specifications

Transmitter



Technology: Radio frequency
Frequency: 2.4GHz
Control Distance: 50 meters
Laser Power: <1mW (Class 2)
Laser Distance: >200m
Wavelength: Red 640-660nm
Wavelength: Green 495-545nm
Battery capacity: 300mAh
battery: AAx2pcs
Working Voltage: 3V
Dimension: 143.7*41.7*27mm
Weight: 46.5g

USB Receiver

Working Voltage: 4.5-5.5V
Dimension: 35.9*14.8*6.5mm
Weight: 2.7g



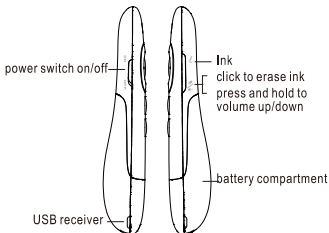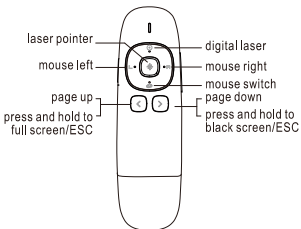


V. Function map

N86





Attention: When using this product, please change your Input Method Editors (IME) to English input mode.




VI. Function Description




1. Power switch: push up to “ON” to turn on the presenter, push down to “OFF” to turn off the presenter.
2. Page up key : click to page up, long press to play slides from the current page. Long press again to end slide show.
3. Page down key : click to page down, long press to enter black screen, long press again to exit black screen.
4. Physical laser key : Press and hold to turn on the physical laser beam, and release to turn off the physical laser beam.
5. Pointer key : PowerPoint 2016, PowerPoint 2013, and PowerPoint 2016 for Mac can achieve digital laser function. In the full screen presentation state of PowerPoint files, press the laser pointer key to open the digital laser pointer inside PowerPoint.
6. Air mouse key : Press the air mouse key to move the cursor freely.

Press the air mouse key again to stop the cursor movement.

7. Left mouse key : Equivalent to the function of a computer's left mouse key.

8. Right mouse key : Equivalent to the function of a computer's right mouse key.

9. Mark key : Click to enter the mark state, move the cursor to the desired location, hold down the mark key , and move the wireless Presenter to freely draw lines and circles on the screen. Release the mark key  to stop drawing.

10. Eraser/Volume key : click the Eraser/Volume key , you can erase the marks, and long press Eraser/Volume key , more than 1 second, then move the wireless presenter up or down, the volume will be increased or decreased.

11. The wireless presenter fully supports PowerPoint, Keynote, Prezi and other commonly used

software. It supports page up and page down keys' function switching. The page up and page down keys correspond to the function of the up and down arrows on the computer keyboard by default and it supports page up and page down for PowerPoint and Keynote. For the first time when you press the page up and page down keys simultaneously, the function will be switched to the left and right arrows on the computer keyboard, supports page up and page down for Prezi. For the second time when you press the page up and page down keys simultaneously, the function will be switched to the Page Up and Page Down on the computer keyboard, supports page up and page down for internet browser and Microsoft Photo software. For the third time when you press the page up and page down keys simultaneously, the function will be switches to the


default up and down arrows on the computer keyboard.

12. The page up/down keys can be customized by Norwii Presenter software.

VII. Installation

1. Install the battery

The product is powered by two No. 7 AAA batteries. After opening the battery cover, put in two No. 7 AAA batteries and close the battery cover.

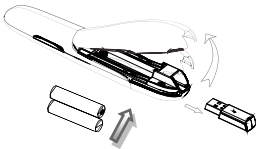


2. Take out the USB receiver and install.

Remove the USB receiver from the lower part of the wireless presenter, and then plug it into the USB interface of the computer. At this time, the bottom right corner of the computer desktop will display

The Professional Presenter

"Discovered New Hardware", and the system will automatically install the driver. When Windows displays "New hardware installed and ready to use", it indicates that the USB receiver installation is complete. The attached image is as follows:

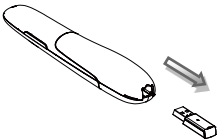

(Take out the USB receiver.)




(The USB receiver into the computer USB port)

3. Control the wireless presenter by operating the key of the flip pen.

4. Turn off the wireless presenter.

After use, please return the USB receiver to the presenter's original position and turn off the power switch to further save power. The attached image is as follows:

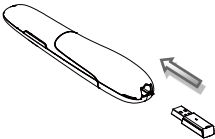

VIII. Frequently Asked Questions

1. How to download Norwii Presenter software and how to pair the presenter and the USB receiver?

For products that support key function customization or highlight serial products that support digital laser, highlight, magnifier, you need to download Norwii Presenter software. Please download it from

the "Downloads" under the "Support" menu of Norwii official website www.norwii.com in English version.

2. How to know if the battery is out of power?

When the power is turned on, if the wireless presenter key is pressed and the LED indicator light does not indicate, it indicates that the battery is low. Please replace the AAA battery.

If the laser button is pressed and the LED indicator light is on, but the laser is not on, it indicates that the laser module is damaged and needs to be replaced.

3. What to do if the laser becomes dim?

The darkening of the laser beam is generally due to insufficient battery power, which requires timely replacement of the AAA battery. If the laser beam is still just a red dark spot after replacing the AAA battery, it indicates that the laser module is

aging. Please contact us for after-sales repair.

4. Why does the computer do not detect the device when the USB receiver plugs into the PC?


Please check whether the USB works or not. You can use a USB mouse or keyboard to test the USB port. If a USB mouse or keyboard works on the USB port and the USB receiver of the presenter doesn't work, it means the USB receiver is broken or the USB drivers is not compatible with the USB receiver.

You can try another USB port of the same computer or USB ports of another computer to check whether the USB receiver is good or not. If it works on other computer, it means the USB drivers of the computer are not compatible with the USB receiver. You need to back up your data and reinstall the OS.

5. How to calibrate?

Calibration is required when you do not move the wireless presenter,

but the mouse cursor keeps moving in one direction until it stops at the edge of the screen. Another situation is when moving the product horizontally or vertically, the mouse on the computer does not move horizontally or vertically, and there is an angle between the movement direction and the horizontal or vertical direction, calibration operations need to be carried out. Simply say, when you move the product horizontally, and the mouse cursor on the computer does not move horizontally, which requires calibration. The purpose of calibration is to provide a horizontal and vertical reference for the product.

Place the product on a horizontal and stable surface, press and hold the page down key  and turn on the power. The blue LED will flash to indicate entering calibration mode. At this point, release both hands and try to keep the product

level as much as possible. The blue LED flashes for 3 seconds before stopping flashing, and remains on for 5 seconds before turning off, indicating that calibration is complete.

6. The laser is ok, and the USB receiver can be detected by the computer, why does the presenter control the computer?

The reason is the USB receiver doesn't save the presenter's address properly. You can use Norwii Presenter software to let the USB receiver to save the presenter's address again. We also call this operation is to PAIR the wireless presenter and the USB receiver.

7. How to adjust the settings for Norwii Presenter on macOS?

On macOS, users need to add operation permissions of [Input Monitoring], [Screen Recording] and [Accessibility] for Norwii Presenter software under [System

Preferences] - [Security & Privacy] -
[Privacy]

IX. Certifications

CE, ROHS, FDA

FCCID: 2AXGRN95

Declaration of conformity

This laser product complies with IEC/EN60825-1:2014. Complies with 21 CFR 1040.10 and 1040.11, except for deviations pursuant to Laser Notice No.50, dated June 24, 2007.

X. Product Support

Shanghai Norwii Technology Co., Ltd.

Add: 2F, Building 3, No 277, Jinfeng Road, Pudong New Area, Shanghai 201201, P. R. China

Tel: 86-21-51872080

Email: support@norwii.com